

## Insert/ Eject Micro SD Card



Slide the micro secure digital card into the slot until it locks in place



Push the micro secure digital card to release it from the Laptop and slide the micro secure digital card out of the Laptop